



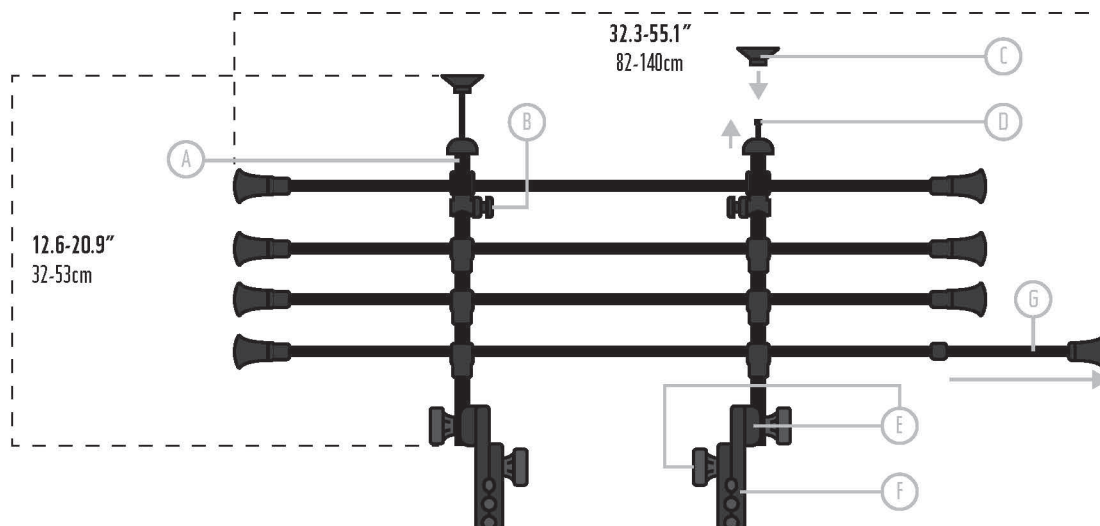

HEADREST MOUNTED TUBULAR CAR DOG GUARD

INSTRUCTION MANUAL

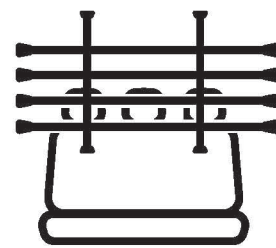

PARTS INCLUDES:

- Ⓐ Leg extender x 2
- Ⓑ Plastic screw x 2
- Ⓒ Rubber x 2
- Ⓓ Screw x 2
- Ⓔ Knobs x 4
- Ⓕ Bracket clamps x 2
- Ⓖ Telescopic bar x 8

PARTI INCLUSE:

- Ⓐ Nr.2 estensioni per la gamba
- Ⓑ Nr.2 viti di plastica
- Ⓒ Nr.2 gommini
- Ⓓ Nr.2 viti
- Ⓔ Nr.4 manopole
- Ⓕ Nr.2 morsetti per staffa
- Ⓖ Nr.8 barre telescopiche

WARNING:

Before installing, ensure the intended installation area is clean and free of obstruction. Do not install on parcel shelf or other non-permanent structure.

AVVERTENZE:

Prima di installare il prodotto, assicurarsi che l'area di installazione sia pulita e libera da ostacoli. Non installare su cappelliere o altre strutture non permanenti.

INSTALLATION:

1. Measure and adjust the barrier according to the width of the headrest area.
2. Raise car headrest. Place the bracket clamps Ⓕ in the proper position and tighten it on headrest posts with knobs Ⓔ.
3. Adjust guard height by loosening the plastic screw Ⓑ, expand the legs Ⓐ upwards to the roof. And tighten the screws Ⓓ to fix into place.
4. Adjust the horizontal bars by sliding the inner bars Ⓖ into position.

INSTALLAZIONE:

1. Misurare e regolare la barriera in base alla larghezza dell'area del poggiatesta.
2. Sollevare il poggiatesta dell'auto. Posizionare i morsetti della staffa Ⓕ nella posizione corretta e serrarli sui montanti del poggiatesta con le manopole Ⓔ.
3. Regolare l'altezza della protezione allentando la vite di plastica Ⓑ, estendere le gambe Ⓐ verso l'alto fino al tetto. Quindi, stringere le viti Ⓓ per fissarle in posizione.
4. Regolare le barre orizzontali facendo scorrere le barre interne Ⓖ in posizione.

